



**S-Module Reinforcement (Kit P/N 860 200 905)**

The following symbols may be used in this document:

<b>⚠ WARNING</b>	
Indicates a hazardous situation which, if not avoided, could result in death or serious injury.	

**⚠ CAUTION** Indicates a hazard situation which, if not avoided, could result in minor or moderate injury.


**NOTICE** Indicates an instruction which, if not followed, could severely damage vehicle components or other property.

<b>⚠ WARNING</b>	
<ul style="list-style-type: none"> <li>- For safety reasons, this kit must be installed by an authorized BRP dealer.</li> <li>- This kit is designed for specific applicable models only (authorized BRP dealers will confirm model(s)). It is not recommended for units other than the one (those) for which it was sold.</li> <li>- This instruction sheet <b>MUST</b> be given to the purchaser.</li> <li>- Should removal of a locking device (e.g. lock tabs, self-locking fasteners, etc.) be required when undergoing disassembly/assembly, always replace with a new one.</li> <li>- Torque wrench tightening specifications must strictly be adhered to.</li> </ul>	



**NOTE:** The illustrations in this document show typical construction of the different assemblies and may not reproduce the full detail or exact shape of the parts; however, they represent parts that have the same or similar function.

Installation time is approximately **0.5** hour.


**REQUIRED TOOL**

REQUIRED TOOL	
(T1): Drill bit of 6 mm (1/4 in)	

**ICON LEGEND**

ICON	INDICATES
	Parts to be discarded
	Parts kept for reinstallation



## PARTS TO BE INSTALLED

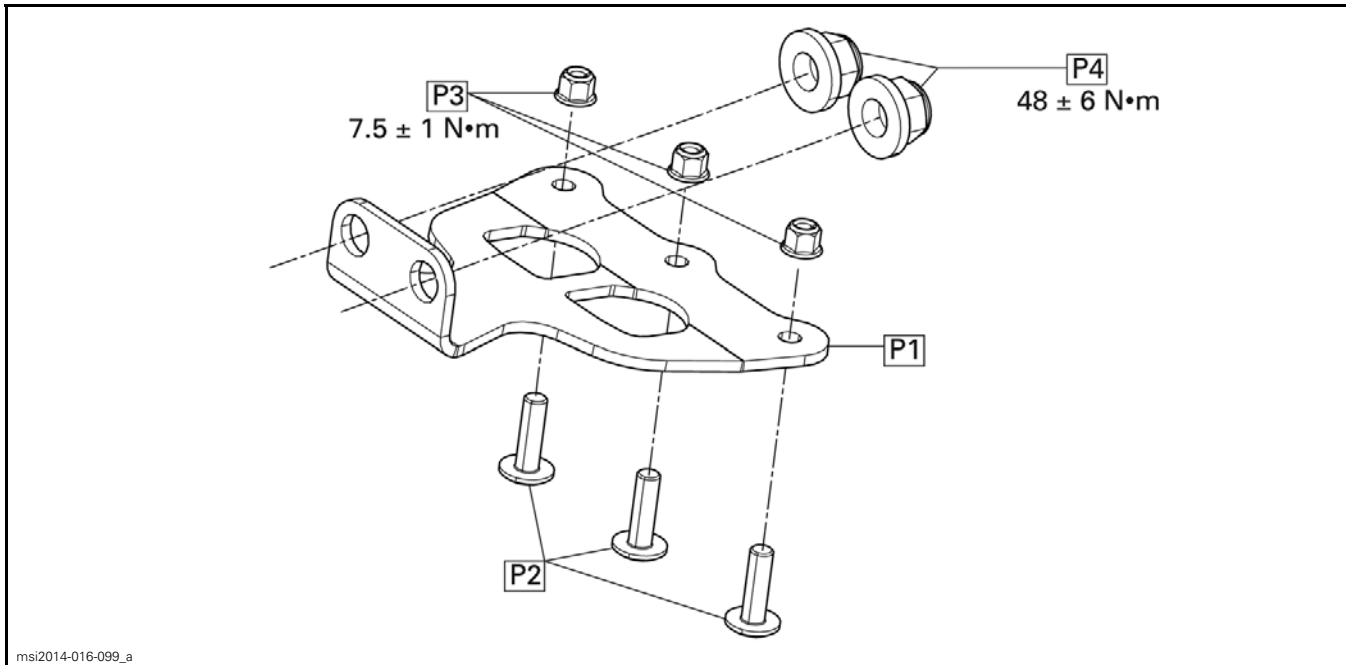



ITEM	DESCRIPTION	PART NUMBER	QTY
P1	Reinforcement Module «S»	Not Available Separately	1
P2	M6 X 20 Hexagonal Screw	250 000 128	3
P3	M6 Elastic Nut	233 261 414	3
P4	M10 Elastic Nut	250 100 088	2

# INSTRUCTIONS


NOTE: Prior to installation, please verify if a revised version of this instruction sheet is available on BOSSWeb.

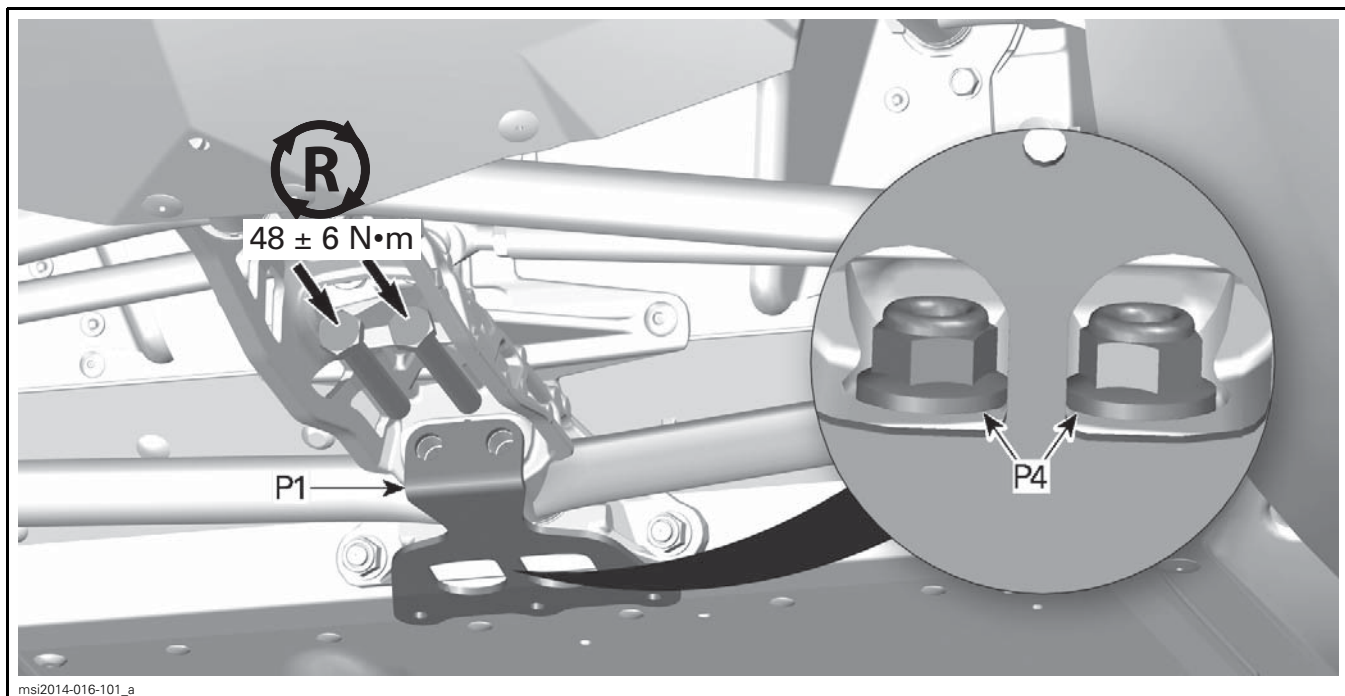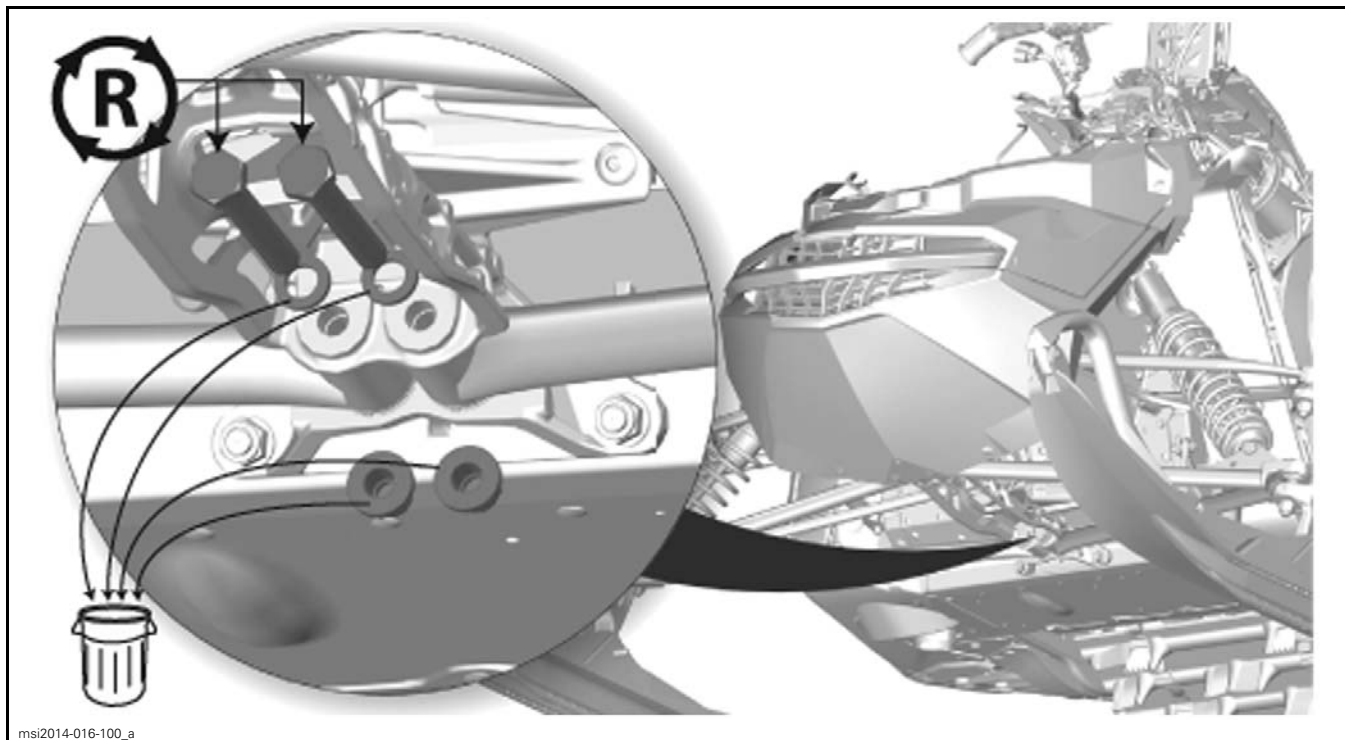

**NOTICE** Components will be damaged if you drill too deep.

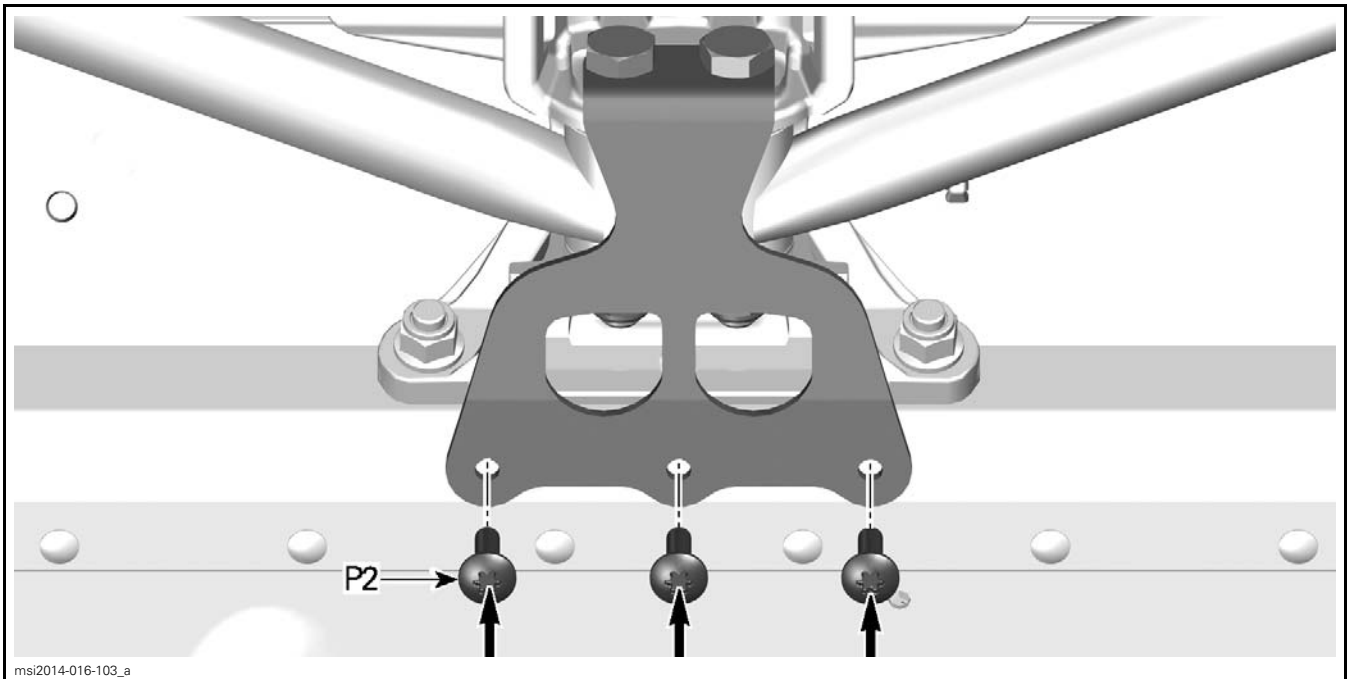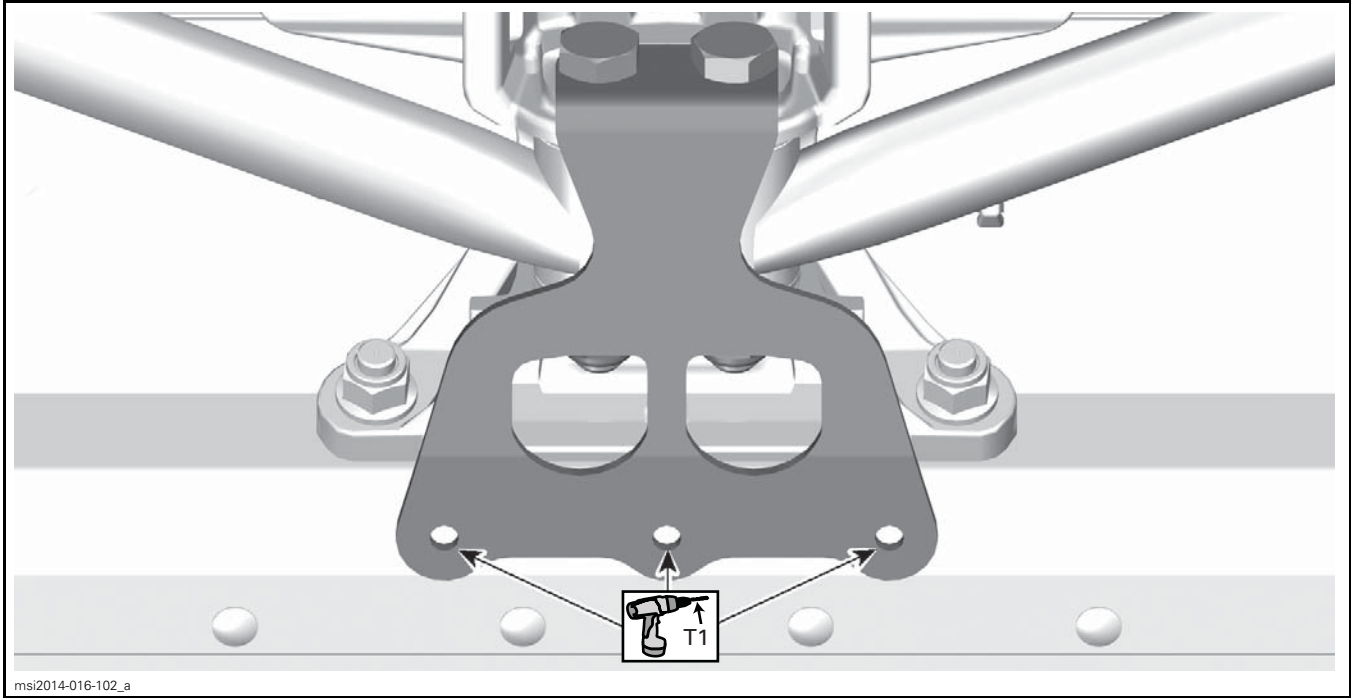

Remove tuned pipe to install M6 elastic nuts [P3].

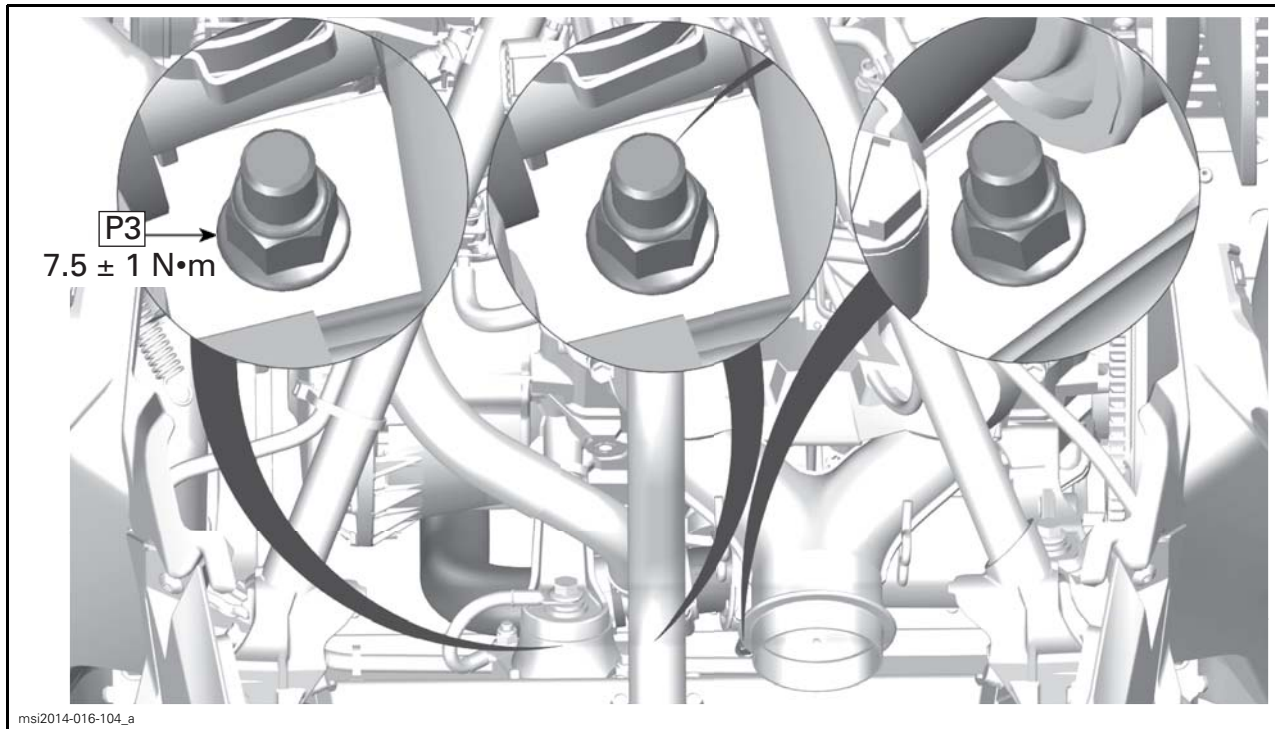

Install all removed parts.